

Dwg. Qty. Part Ref. Per Number Part Name Materials/Remarks SHELL Filament wound epoxy/glass composite-(1) 1 Shell Head locking grooves integrally wound in-place, with F/C side-ports. HEAD 2 2 Bearing Plate 6061-T6 aluminum alloy-hard anodized 50664 (3) 2 50667 Sealing Plate PVC Thermoplastic (4) 2 50670 Permeate Port PVC Thermoplastic (5) 2 45248 Port Retainer 304 Stainless Steel, Truarc type 6 2 45320 Head Seal Ethylene Propylene, Quad Ring (7) 2 45350 Perm Port Seal Ethylene Propylene, square-cut HEAD INTERLOCK (8) 6 Cast Aluminum-hard anodized 50758 Locking Ring (9) 2 50676 Securing Ring Reinforced Plastic - Yellow Color Securing Screws 316 Stainless Steel (0) 6 45228 VESSEL SUPPORT *3 Saddle Engineering Thermoplastic 45102 (2) *3 304 Stainless Steel - PVC cushion 45042 Strap Assy (3) 18-8 Stainless Steel 4 46265 Strap Screw ELEMENT INTERFACE Engineering Thermoplastic As Required Adapter (15) 1 50214 Thrust Ring Assy Engineering Thermoplastic (6) 2 45308 Adapter Seal Ethylene Propylene - 0-Ring 4 As Required PWT Seal Ethylene Propylene - 0-Ring *2 each furnished with length code 1, 2 & 3

CENTER VESSEL ON 2 OR 3 SUPPORTS AT SPAN(S)"S"; 3 SUPPORTS REQUIRED FOR LENGTHS -4 AND OVER

ASME CODE NAMEPLATE (OPT.)

MIN.OPER.TEMP.20 °F.


MFG.SER.

YR.BLT.

CLASS

ADVANCED STRUCTURES, INC.
d.b.a.
ESCONDIDO, CALIFORNIA U.S.A.
MAX.W.P. 600 P.S.I. 120F.

CAUTION—INCORRECT MANIFOLDING WILL CAUSE SEVERE LOCAL STRESS AROUND PORT AND MAY RESULT IN LEAKS AND PREMATURE FAILURE; TAKE EVERY PRECAUTION LISTED ON REVERSE, SEE INSTALLATION INSTRUCTIONS FOR FURTHER DETAILS

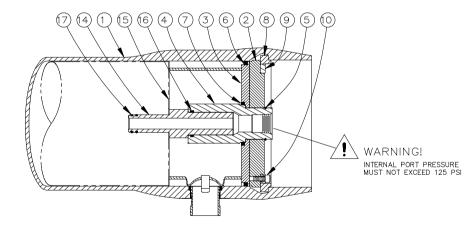

SECTION THROUGH END CLOSURE

ITEM (15)DOWNSTREAM ONLY

NOTES

- SHELL EXTERIOR COATED WITH WHITE, HIGH GLOSS POLYURETHANE PAINT
- DIMENSION IN INCHES (MM APPROX.)
- NOT TO BE USED FOR CONSTRUCTION UNLESS CERTIFIED

Shell Length Code	L.O.A. IN (MM)	Port to Port IN (MM)	S Span IN (MM)	Empty Weight LB (KG)
1	59.0	45.0	28 X 1	80
	(1499)	(1143)	(711)	(27)
2	99.0	85.0	56 X 1	105
	(2515)	(2159)	(1422)	(48)
3	139.0	125.0	80 X 1	135
	(3531)	(3175)	(2032)	(61)
4	179.0	165.0	64 X 2	160
	(4547)	(4191)	(1626)	(73)
5	219.0	205.0	78 X 2	190
	(5563)	(5207)	(1981)	(86)
6	259.0	245.0	92 X 2	215
	(6579)	(6223)	(2337)	(98)
7	299.0	285.0	106 X 2	245
	(7595)	(7239)	(2692)	(111)
7.5	319.0	305.0	114 X 2	260
	(8103)	(7747)	(2896)	(118)
8	339.0	325.0	120 X 2	270
	(8611)	(8255)	(3048)	(124)



CodeLine DIVISION STRUCTURAL NORTH AMERICA

Escondido, California U.S.A.

	ENGR AP 18MAR99	MODEL E8B/SP					
	QLTY RAP 18MAR99	BRACKISH RO PRESSURE VESSEL SIDEWALL PORTING					
	MRKT SH 18MAR99	EC0 89639	SHEET 1 OF 1	SIZE B	NUMBER 507015	REV H	

RATING:

INTENDED USE

The Model E8B/SPFiberglass R0 Pressure Vessel is designed for continuous, long—term use as a housing for reverse osmosis membrane elements to desalt typical brackish waters at pressures up to 600 psi. Any make of—eight inch nominal diameter spiral—wound element is easily accommodated; the appropriate interfacing hardware for the element specified is furnished with the vessel.

The model E8B/SP is designed in accordance with the engineering standards of the Boiler and Pressure Vessel Code of the American Society of Mechanical Engineers (ASME Code). At small additional cost, vessels can be inspected during construction by an ASME Authorized Inspector and ASME Code stamped.

The Model E8B/SP must be installed, operated and maintained in accordance with the precautions listed and good industrial practice to assure safe operation over a long service life.

The high performance reinforced plastic shell must be allowed to expand under pressure; undue restraint at support points or piping connections can cause leaks to develop in the shell. This side—ported vessel requires special precautions in mounting and connection to piping so that the vessel will not be subjected to excessive stress due to bending moments acting at the side openings in the fiberglass shell.

The end closures, incorporating close—fitting, interlock—ing metal components, must be kept dry and free of corrosion; deterioration can lead to catastrophic mechanical failure of the heads.

CodeLine Division, Structural North America will assist the purchaser in determining the suitability of this standard vessel for their specific operating conditions. The final determination however, including evaluation of the standard materials of construction for compatibility with the specific corrosive environment, shall be the responsibil—ty of the purchaser. Alternate materials with enhanced corrosion resistance are available on special order.

Specifications subject to change without notice.

PRECAUTIONS

- DO... read, understand and follow all instructions; failure to take every precaution will void warranty and may result in vessel failure
- DO... mount shell centered on horizontal members spaced at recomended span(s) "S" using compliant mounting hardware furnished; tighten hold down straps just snug
- DO... align and center side ports with the manifold header; correct causes of misalignment in a row of vessels connected to the same header
- DO... use flexible type grooved—end pipe couplings, Victaulic® Style 77 or equal, at sideports; allow full .125 inch gap between port and piping, and position piping to maximize flexibility of connection
- DO... provide flexibility in, and support for piping manifold so that vessel can grow in length under pressure without undue restraint; provide additional flexible joints in large pipes leading to manifold header
- DO... provide overpressure protection for vessel set at not more than 105% of design pressure
- DO... inspect end closures regularly; replace components that have deteriorated and correct causes of corrosion
- DO NOT...work on any component until first verifying that pressure is relieved from vessel
- DO NOT...make rigid piping connections to ports or clamp vessel in any way that restricts growth of fiberglass shell under pressure; ▲DIA = 0.015 in. (0.4mm) and ▲L = 0.25 in. (6mm) for a length code -8 vessel
- DO NOT...hang piping manifolds from ports or use vessel in any way to support other components
- DO NOT...tighten Permeate Port connection more than one turn past hand tight
- DO NOT...operate vessel without connecting both Permeate Ports internally to a complete set of elements or otherwise plug ports internally so that external piping connection is not subjected to feed pressure
- DO NOT...install Spacer on downstream end of vessel
- DO NOT...operate vessel without Thrust Ring installed downstream
- DO NOT...pressurize vessel until double checking to verify that all three segments of Locking Ring Set are in place, and that the Securing Ring is fully seated and secured by all three Securing Screws
- DO NOT...operate vessel at pressures and temperatures in excess of its rating
- DO NOT...operate vessel with permeate pressure in excess of 125 psi at 120°F (0.9 MPa at 49°C)
- DO NOT...tolerate leaks or allow end closures to be routinely wetted in any way

ORDERING

Please specify the following:

- VESSEL MODEL NUMBER built from table of options below
- MEMBRANE ELEMENT MODEL NUMBER
- SPECIFIC CONCERNS regarding INTENDED USE and requests for SPECIAL MATERIALS of CONSTRUCTION

A vessel model number specifies a complete assembly less element interface components. The required interface components are furnished with the vessel but are specified separately.

Membrane elements and between-element connectors (interconnectors) are furnished by membrane element manufacturer.

